



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY KDL-40EX710. You'll find the answers to all your questions on the SONY KDL-40EX710 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY KDL-40EX710
User guide SONY KDL-40EX710
Operating instructions SONY KDL-40EX710
Instructions for use SONY KDL-40EX710
Instruction manual SONY KDL-40EX710

SONY

4-270-481-12(1)

LCD
Digital Colour TV

Operating Instructions

BRAVIA

KDL-40NX520 / 40EX420 / 37EX420 / 32NX520 / 32EX420 / 32EX321 / 32EX320 / 26EX321
KDL-26EX320



[Your user manual](#)
[SONY KDL-40EX710](#)

Manual abstract:

~ · When you turn on the TV, the power indicator lights up in green. 6 GB 6: Auto-tuning the TV 1 Press G/g to select "Start", then press Auto Tuning . Do you want to start Auto Tuning? Start Skip "Quick Scan" : channels are tuned according to the cable operator information within the broadcast signal. Recommended setting for "Frequency" and "Network ID" is "Auto". This option is recommended for fast tuning when supported by your cable operator. If the "Quick Scan" does not tune, please use the "Full Scan" method below. "Full Scan" : All available channels are tuned and stored. This procedure may take some time. This option is recommended when "Quick Scan" is not supported by your cable provider. Start-up Guide 2 2 Press F/f to select "Antenna" or "Cable", then press .

If you select "Cable", the screen for selecting the scan type appears. See "To tune the TV for Cable connection" (page 7). The TV then starts searching for all available digital channels, followed by all available analogue channels. This may take some time, so do not press any buttons on the TV or remote while proceeding. If a message appears for you to confirm the aerial connection No digital or analogue channels were found.

Check all the aerial/cable connections and press to start auto-tuning again. ~ Press f to select "Start". The TV starts searching for channels. Do not press any buttons on the TV or remote. · Some cable providers do not support "Quick Scan".

If no channels are detected using "Quick Scan", perform "Full Scan". 3 Programme Sorting (Only in analogue mode): Changes the order in which the analogue channels are stored on the TV. 1 Press F/f to select the channel you want to move to a new position, then press g. 2 Press F/f to select the new position for your channel, then press . If you do not change the order in which the analogue channels are stored on the TV, press HOME to go to next step. ~ · This step will not appear if any analogue channel is found. The message "Set-up complete" will appear on the screen. Press . The TV has now tuned in all the available channels. z · USB System Update You can update the TV system using USB memory.

Obtain information from the website below. <http://support.sony-europe.com/TV/> To tune the TV for Cable connection 1 Press and F/f to select "Quick Scan" or "Full Scan", then press . 7 GB Adjusting the viewing angle of the TV (NX520 models only) This TV can be adjusted within the angles shown below. 0° 6° Detaching the TableTop Stand from the TV ~ · Do not remove the Table-Top Stand for any reason other than to wall-mount the TV. Table-Top Stand 1 4 z · Be sure the TV is on the vertical position before switching on. TV set must not be powered on with LCD panel face down to avoid uneven picture uniformity.

Remove screw as shown. Install screw into the top screw hole of the Table-Top Stand.

2 3 Lift up and tilt. Slide in. · To return to 0°, reverse the above procedure. 8 GB Safety Information Installation/Set-up Install and use the TV set in accordance with the instructions below in order to avoid any risk of fire, electrical shock or damage and/or injuries. · When transporting the TV set, do not subject it to jolts or excessive vibration.

· When transporting the TV set for repairs or when moving, pack it using the original carton and packing material. Ventilation · Never cover the ventilation holes or insert anything in the cabinet. · Leave space around the TV set as shown below. · It is strongly recommended that you use a Sony wall-mount bracket in order to provide adequate air-circulation. · care not to catch your feet on the cables.

Disconnect the mains lead from the mains socket before working on or moving the TV set. Keep the mains lead away from heat sources. Unplug the mains plug and clean it regularly. If the plug is covered with dust and it picks up moisture, its insulation may deteriorate, which could result in a fire. Installation · The TV set should be installed near an easily accessible mains socket. · Place the TV set on a stable, level surface. · Only qualified service personnel should carry out wall installations..



[Your user manual](#)
[SONY KDL-40EX710](#)